



11) This is when you want to screw down "bed" piece #2.

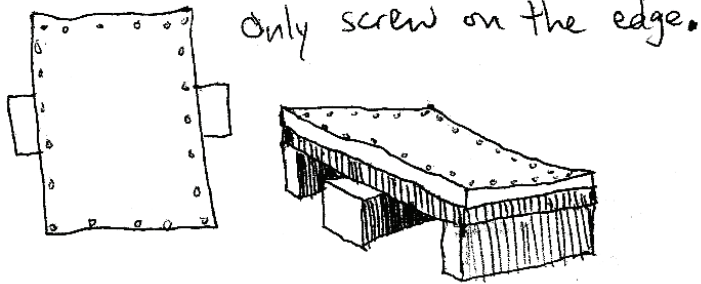

12) Take the angle iron + hold it in place against the bottom 4x4 - mark thru one of the holes  $\frac{1}{2}$  way up, w/ a pencil or something.

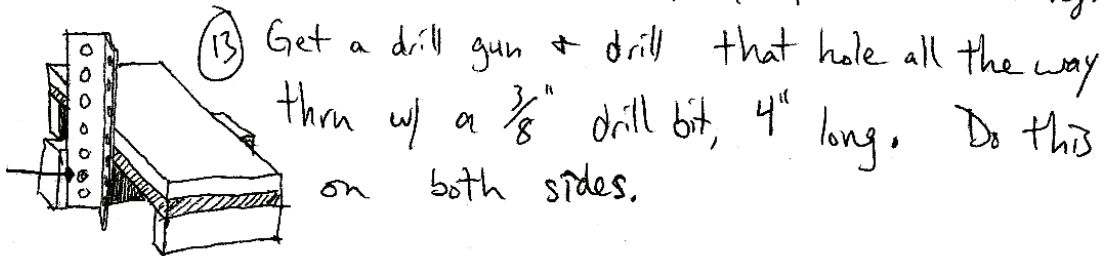

14) Bolt the angle iron to the 4x4s on both sides.

